

4. Downloads

Manual

We continue to develop and improve our products, adding new functions and features on a regular basis, so we want you to always have the latest manual. For this reason, we do not include a manual in an electronic or printed form but kindly ask you to download the latest manual using the following link:

ihse.com/manual

Draco MV-Tool

The Draco MV-Tool provides following functions:

- Advanced configuration
- Extended monitoring options
- System update (firmware update)
- Local backup option

Please download the Draco MV-Tool from the following download link:

ihse.com/software



IHSE USA (AMERICAS)

IHSEUSA LLC
1 Corporate Drive
NJ 08512 Cranbury
USA

tel. +1 732 738 8780
fax +1 732 631 0121
info@ihseusa.com
www.ihseusa.com

Support hours:
Monday - Friday

EST
9.00 am to 5.00 pm

IHSE ASIA (APAC)

IHSE GmbH Asia Pacific Pte Ltd
158 Kallang Way, #07-13A
349245 Singapore
Singapore

tel. +65 6841 4707
sales@ihseapac.com
www.ihseapac.com

Support hours:
Monday - Friday

SGT
9.00 am to 6.00 pm

IHSE Headquarters (EUROPE)

IHSE GmbH
Benzstrasse 1
88094 Oberteuringen
Germany

tel. +49 7546 9248-43
fax +49 7546 9248-48
techsupport@ihse.de
www.ihse.de

Support hours:
Monday - Thursday
Friday

CET
8.00 am to 6.00 pm
8.00 am to 5.00 pm

Draco MultiView 4K₆₀

KVM Switch Series MV42



1. Package Contents

Please check if your package contains the following items:

	MV42-DPSH	MV42-DPDH	MV42-H2SH	MV42-H2DH
Draco MultiView 4K ₆₀	1	1	1	1
Europe power cord 2,0 m	2	2	2	2
DisplayPort cable 2,0 m	4	8	-	-
HDMI cable 1,8 m	-	-	4	8
USB cable Type A-B, 1,8 m	4	4	4	4
Quick Setup	1	1	1	1



If anything is missing, please contact your dealer.

2. System Setup



First-time users are recommended to set up the system in a test environment that is limited to a single room. This makes it easier to identify and solve any cabling problems, and experiment with your system more conveniently.



To power up the system, the following sequence is recommended:
Monitor - Draco MultiView 4K₆₀ - source.

Draco MultiView 4K₆₀ Setup

1. Connect keyboard, mouse, and monitor to the Draco MultiView 4K₆₀.
2. Connect up to four CPUs using the provided connecting cables to the Draco MultiView 4K₆₀.
3. Connect the Draco MultiView 4K₆₀ to the power supply.
4. Start the system.

Setting Initial Configuration in the OSD

1. Open the OSD via Hot Key using the following keyboard sequence: press **<left shift>** twice rapidly, then **<o>** and subsequently **<Esc>**. Log in to the configuration menu with administrator rights using the default account: username: admin, password: admin (please refer to the manual). The default IP address is 192.168.100.95 and DHCP is deactivated.
2. Configure your system as required.



After the configuration of the system it is recommended to save the configuration under **Configuration > Save** and then restart the Draco MultiView 4K₆₀ by selecting **Configuration > Restart MV**.

Setting Advanced Configuration in the Draco MV-Tool

Optionally you can set an advanced configuration via Draco MV-Tool.

1. Install the Draco MV-Tool (see manual).
2. Connect the Draco MultiView 4K₆₀ to the computer via network cable.
3. Open the Draco MV-Tool and set a network connection between Draco MultiView 4K₆₀ and Draco MV-Tool (see manual). The default IP address is 192.168.100.95 and DHCP is deactivated.



After the advanced configuration of the system it is recommended to save the configuration under **Remote Save...** and then restart the Draco MultiView 4K₆₀ by selecting **Device > Advanced Service > Restart Device**.

3. Technical Support

Prior to contacting support please ensure you have read this manual, and then installed and set-up your device as recommended.

Support Checklist

To efficiently handle your request, it is necessary that you complete a support request checklist:

ihse.com/checklist

Please have the following information available before you call:

- Company, name, phone number and e-mail address
- Type and serial number of the device (see bottom of device)
- Date and number of sales receipts, name of dealer if necessary
- Issue date of the existing manual
- Nature, circumstances, and duration of the problem
- Involved components (such as graphic source/CPU, OS, graphic card, monitor, USB-HID/USB 2.0 devices, interconnect cable) including manufacturer and model number
- Results from any testing you have done

Shipping Checklist

1. To return your device, please contact your dealer to obtain an RMA number (Return-Material-Authorization).
2. Package your devices carefully, preferably using the original box. Add all pieces which you received originally.
3. Please note your RMA number visibly on your shipment.



Please understand that devices which are sent in without an RMA number cannot be accepted. The shipment will be sent back without being opened; postage unpaid.